


BAND SAW 222 - 22 F

BLADE GUIDE & FRAME

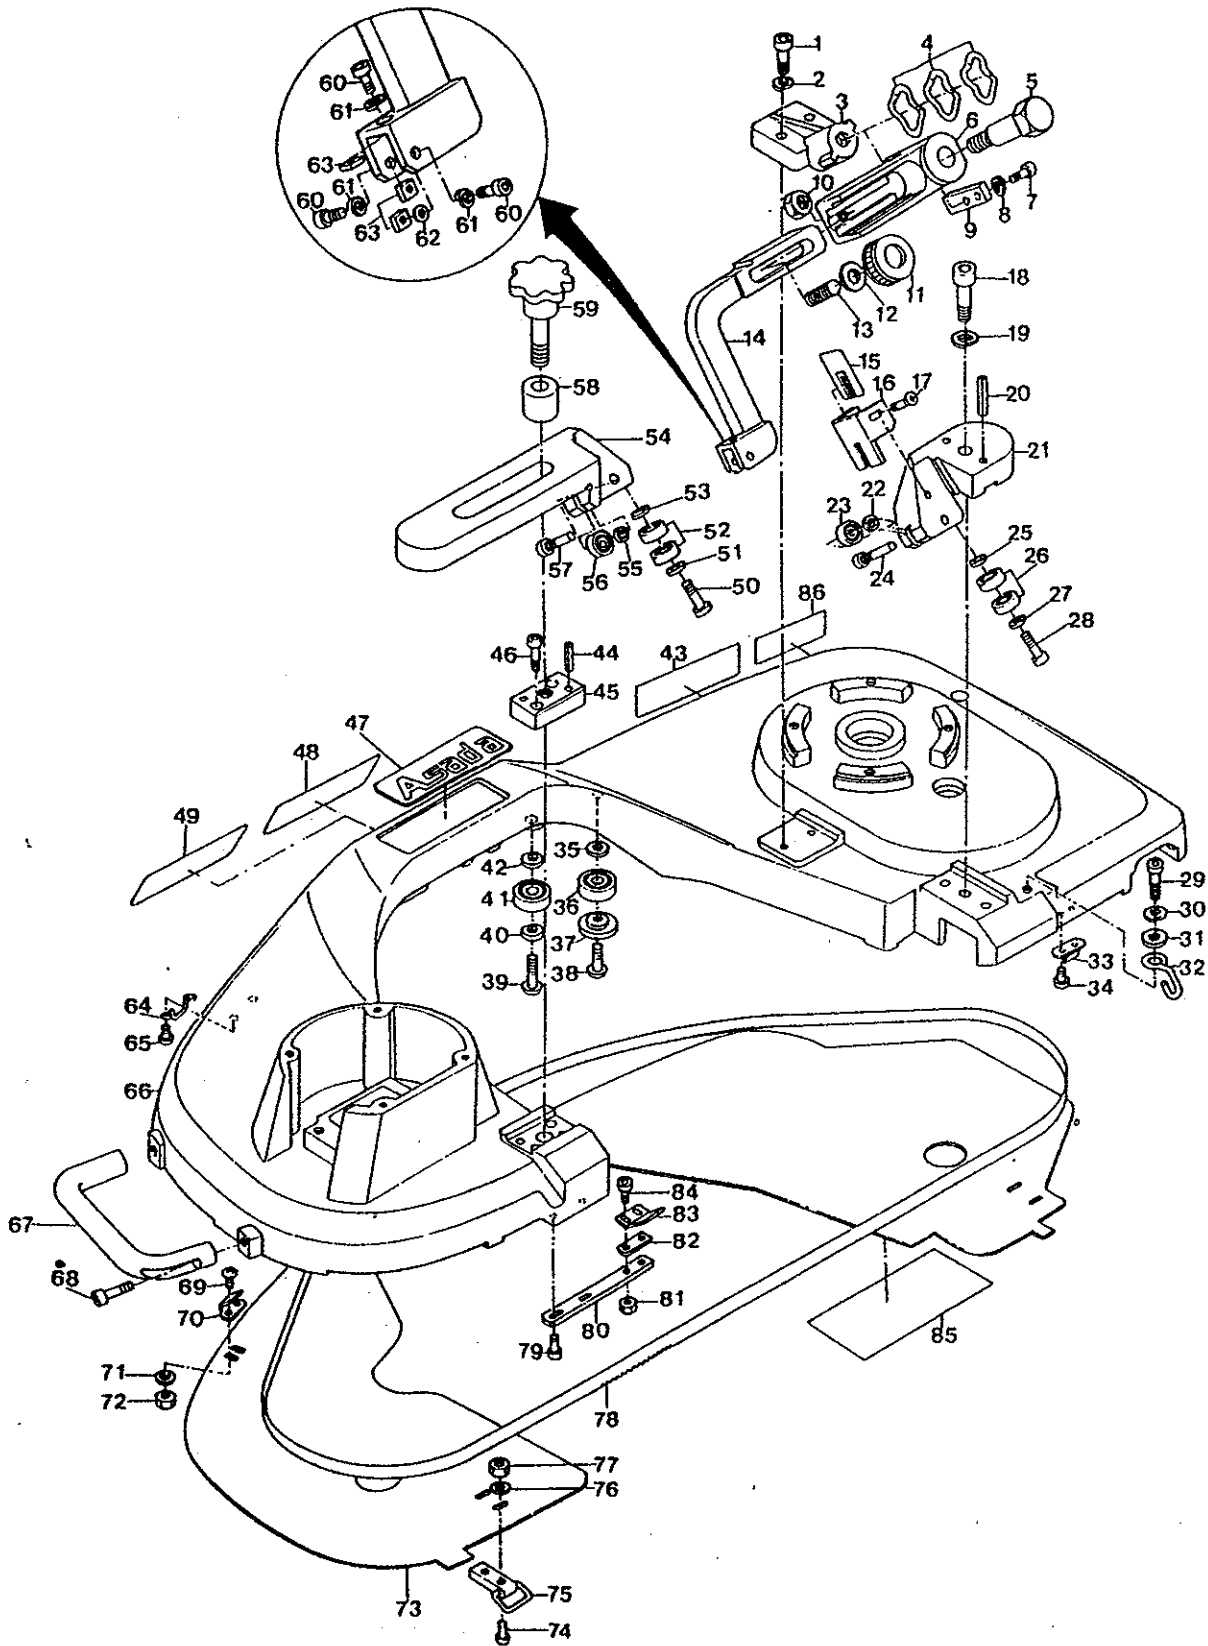


BAND SAW 222 - 22F

BLADE

NO.	PARTS NAME	QTY	CODE NO.
1	STOP BOLT 8 x 35	2	80180
2	SPRING WASHER 8	2	81114
3	GUIDE BRACKET	1	BS537
4	WAVE WASHER WW-16	3	81136
5	ARM STOP BOLT	1	BS539
6	ARM SUPPORT	1	BS538
7	STOP BOLT 5 x 12	2	80157
8	SPRING WASHER 5	2	81112
9	STOP PLATE	1	BS540
10	HEX NUT 8	1	81064
11	DIMPLE KNOB	1	70746
12	WASHER 8	1	81147
13	ARM BOLT	1	BS541
14	GUIDE ARM	1	BS542
15	SCRAPER RUBBER	1	BS571
16	SCRAPER PLATE	1	BS632
17	PAN-HEAD SCREW 5 x 10	1	BS181
18	STOP BOLT 10 x 40	1	80192
19	SPRING WASHER 10	1	81120
20	R-PIN 6 x 35	2	83063
21	BLADE GUIDE (R)	1	BS567
22	ROUND WASHER 5	1	70149
23	BALL BEARING 605ZZ	1	84146
24	GUIDE PIN	1	BS569
25	ROUND WASHER 6	4	70151
26	BALL BEARING 606ZZ	8	84154
27	ROUND WASHER 6	4	70151
28	GUIDE PIN	4	BS628
29	STOP BOLT 8 x 20	1	80177
30	SPRING WASHER 8	1	81114
31	WASHER 8	1	81147
32	CHAIN HOOK	1	BS524
33	BACK PLATE HOOK	2	BS523
34	PAN-HEAD SCREW 4 x 6	4	82219
35	WASHER 10	10	81152
36	BALL BEARING 6200ZZ	6	84170
37	BLADE WASHER	2	BS526
38	BUTTON SCREW 10 x 25	6	82310
39	BUTTON SCREW 10 x 30	2	82302
40	WASHER 10	2	81152
41	BALL BEARING 6300ZZ	2	84162
42	WASHER 10	2	81152
43	WEIGHT ADJUSTMENT STICKER	1	BS579
44	R-PIN 6 x 25	2	83039
45	B222 KEY	1	BS609
46	STOP BOLT 6 x 18	2	80165
47	ASADA STICKER	1	BS582
48	BS222 STICKER	1	BS583
49	BS22F STICKER	1	BS601
50	GUIDE PIN	4	BS628
51	ROUND WASHER 6	4	70151
52	BALL BEARING 606ZZ	8	84154
53	ROUND WASHER 6	4	70151
54	BLADE GUIDE F	1	BS572
55	ROUND WASHER 6	1	70149


BAND SAW 222 - 22F

FRAME

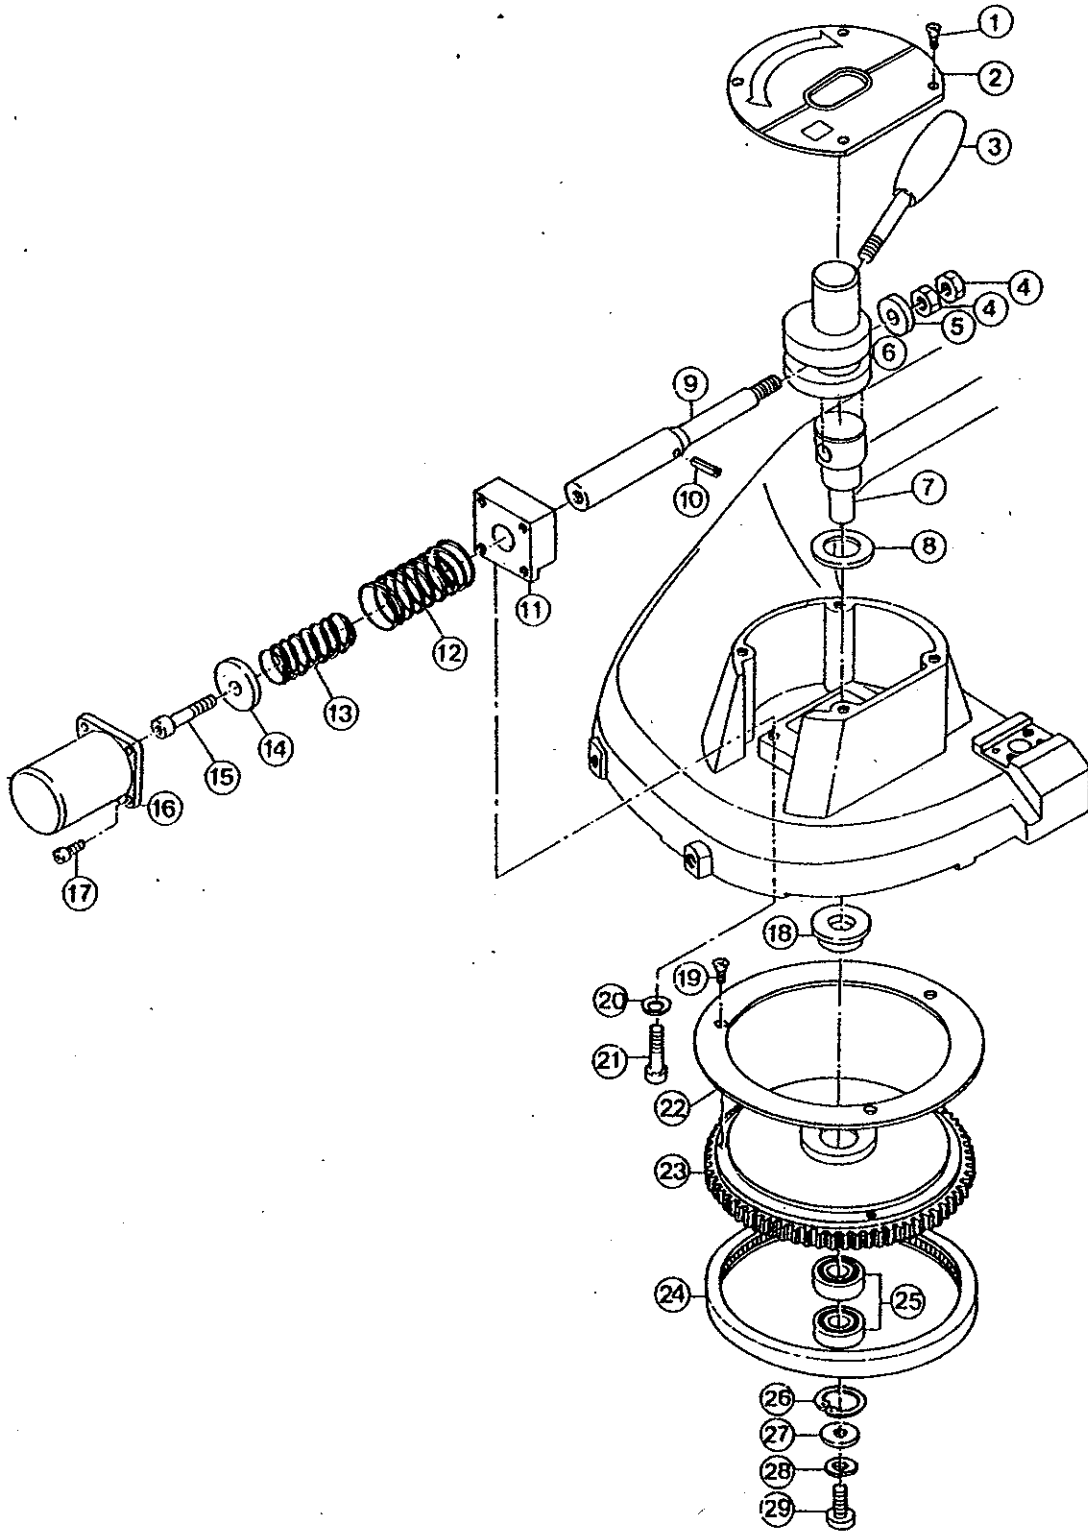


BAND SAW 222 - 22 F

FRAME

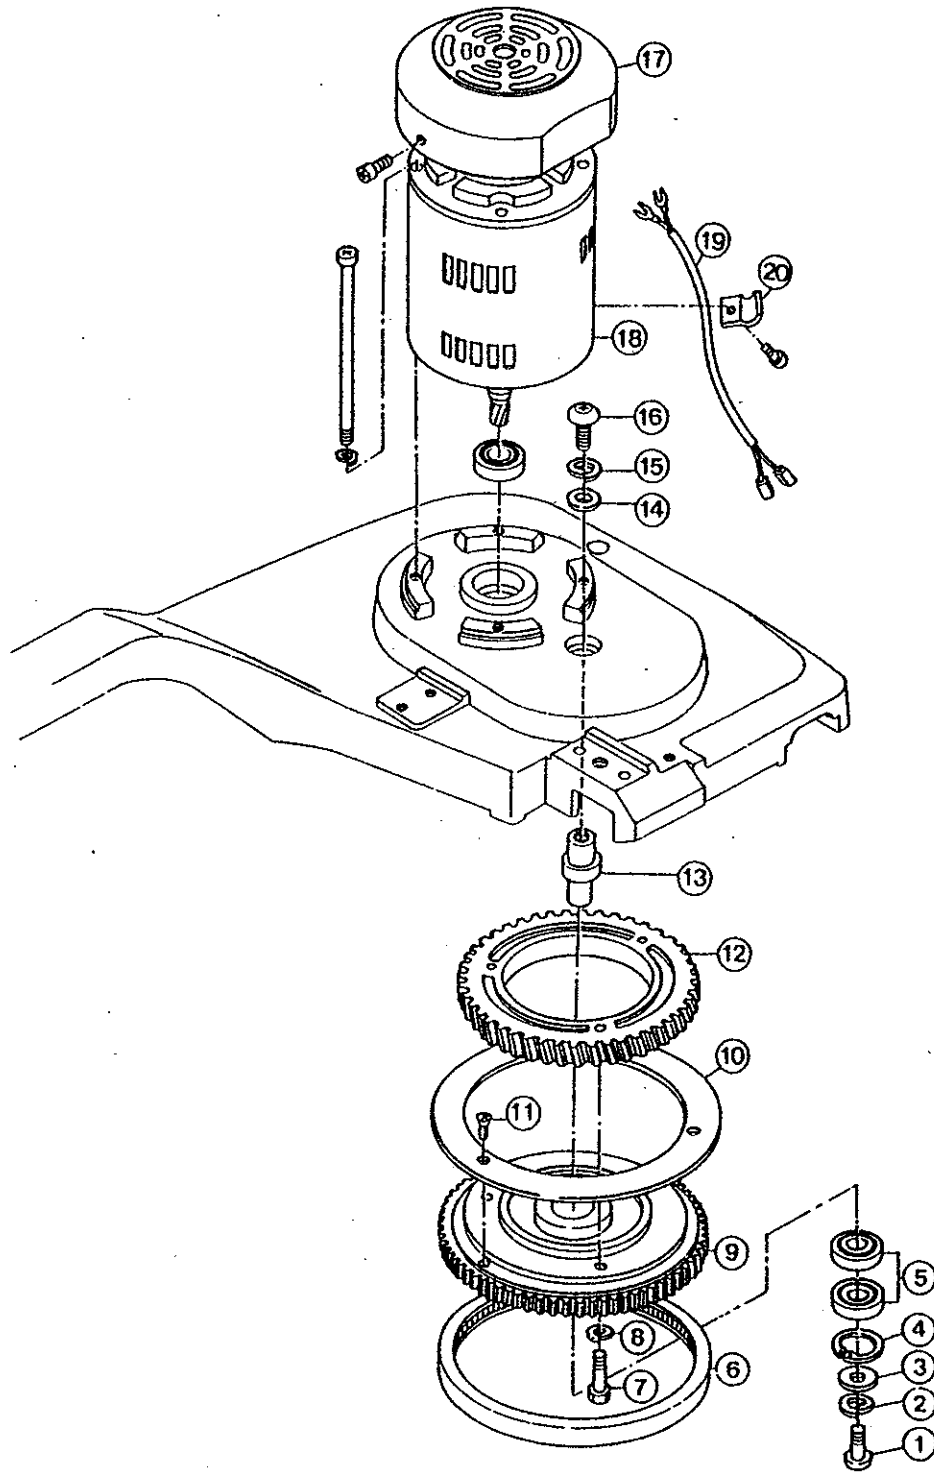


BAND SAW 222-22F

VICE

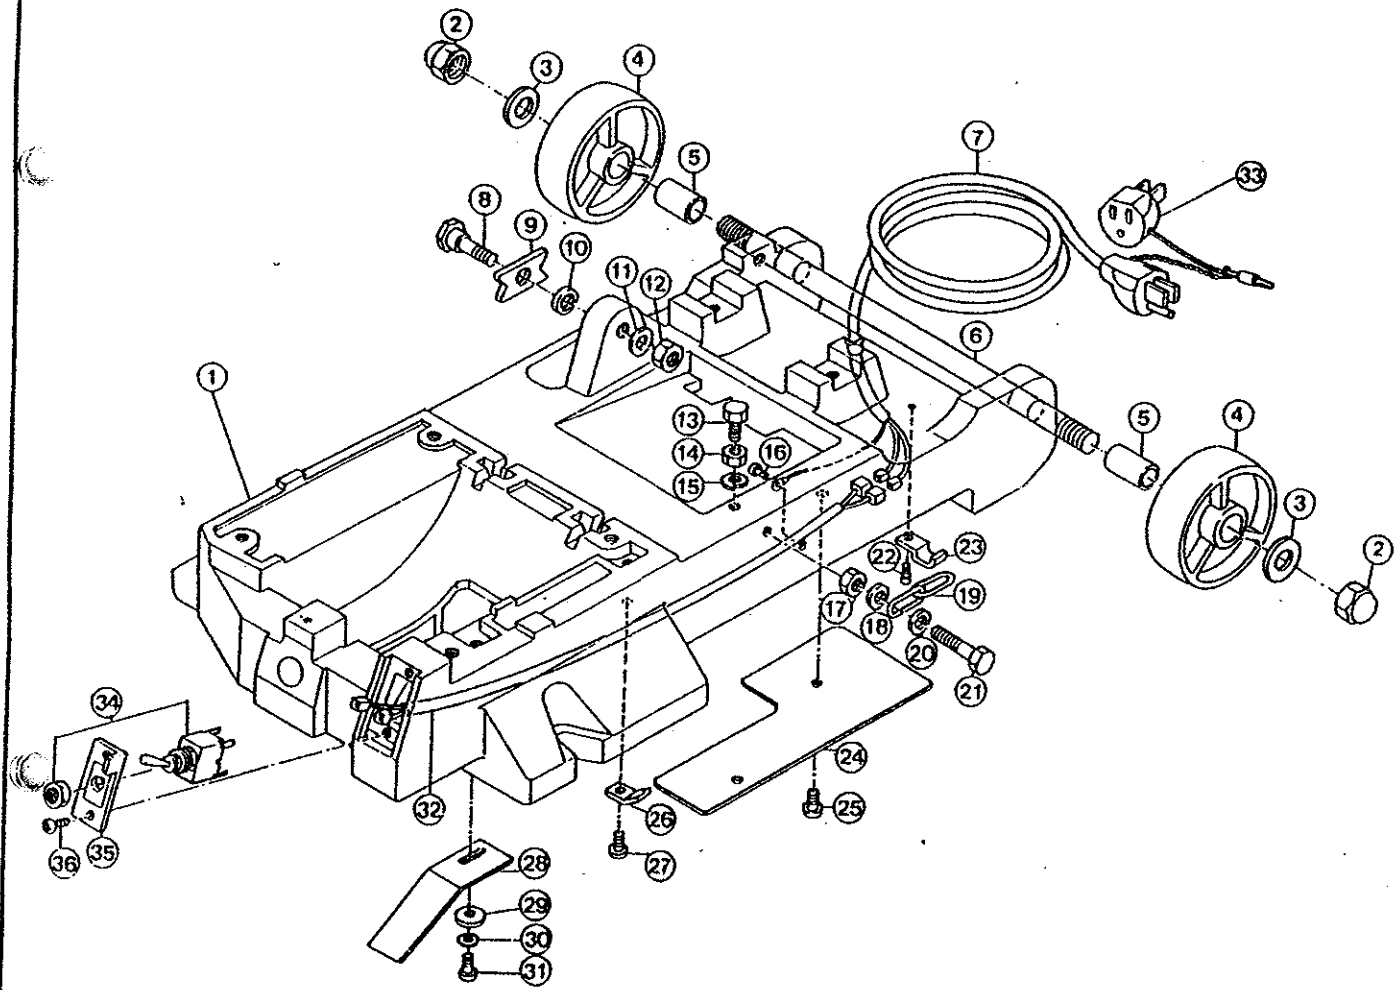


BAND SAW 222-22F

CHAIN VICE

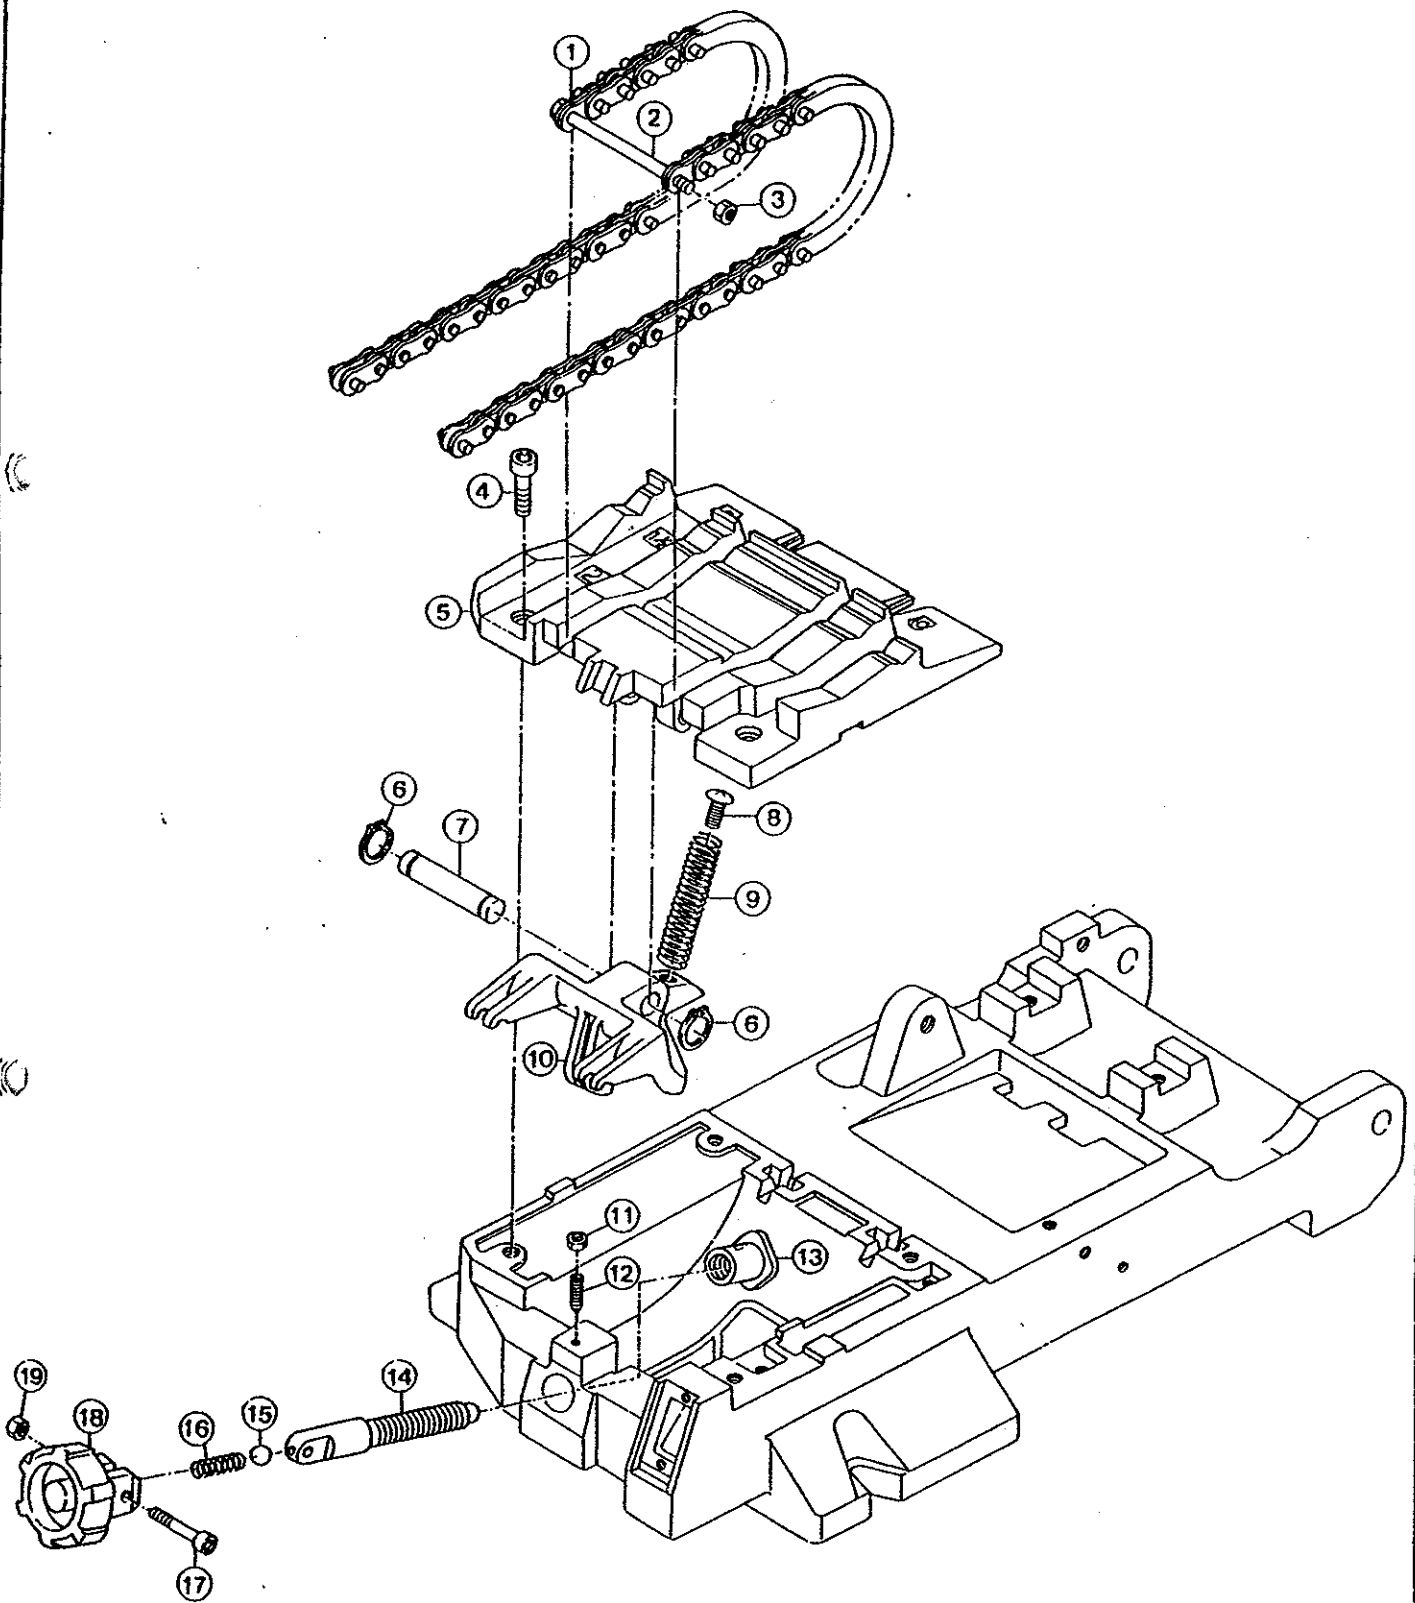

BAND SAW 222-22F

WEIGHT ADJUST SYSTEM

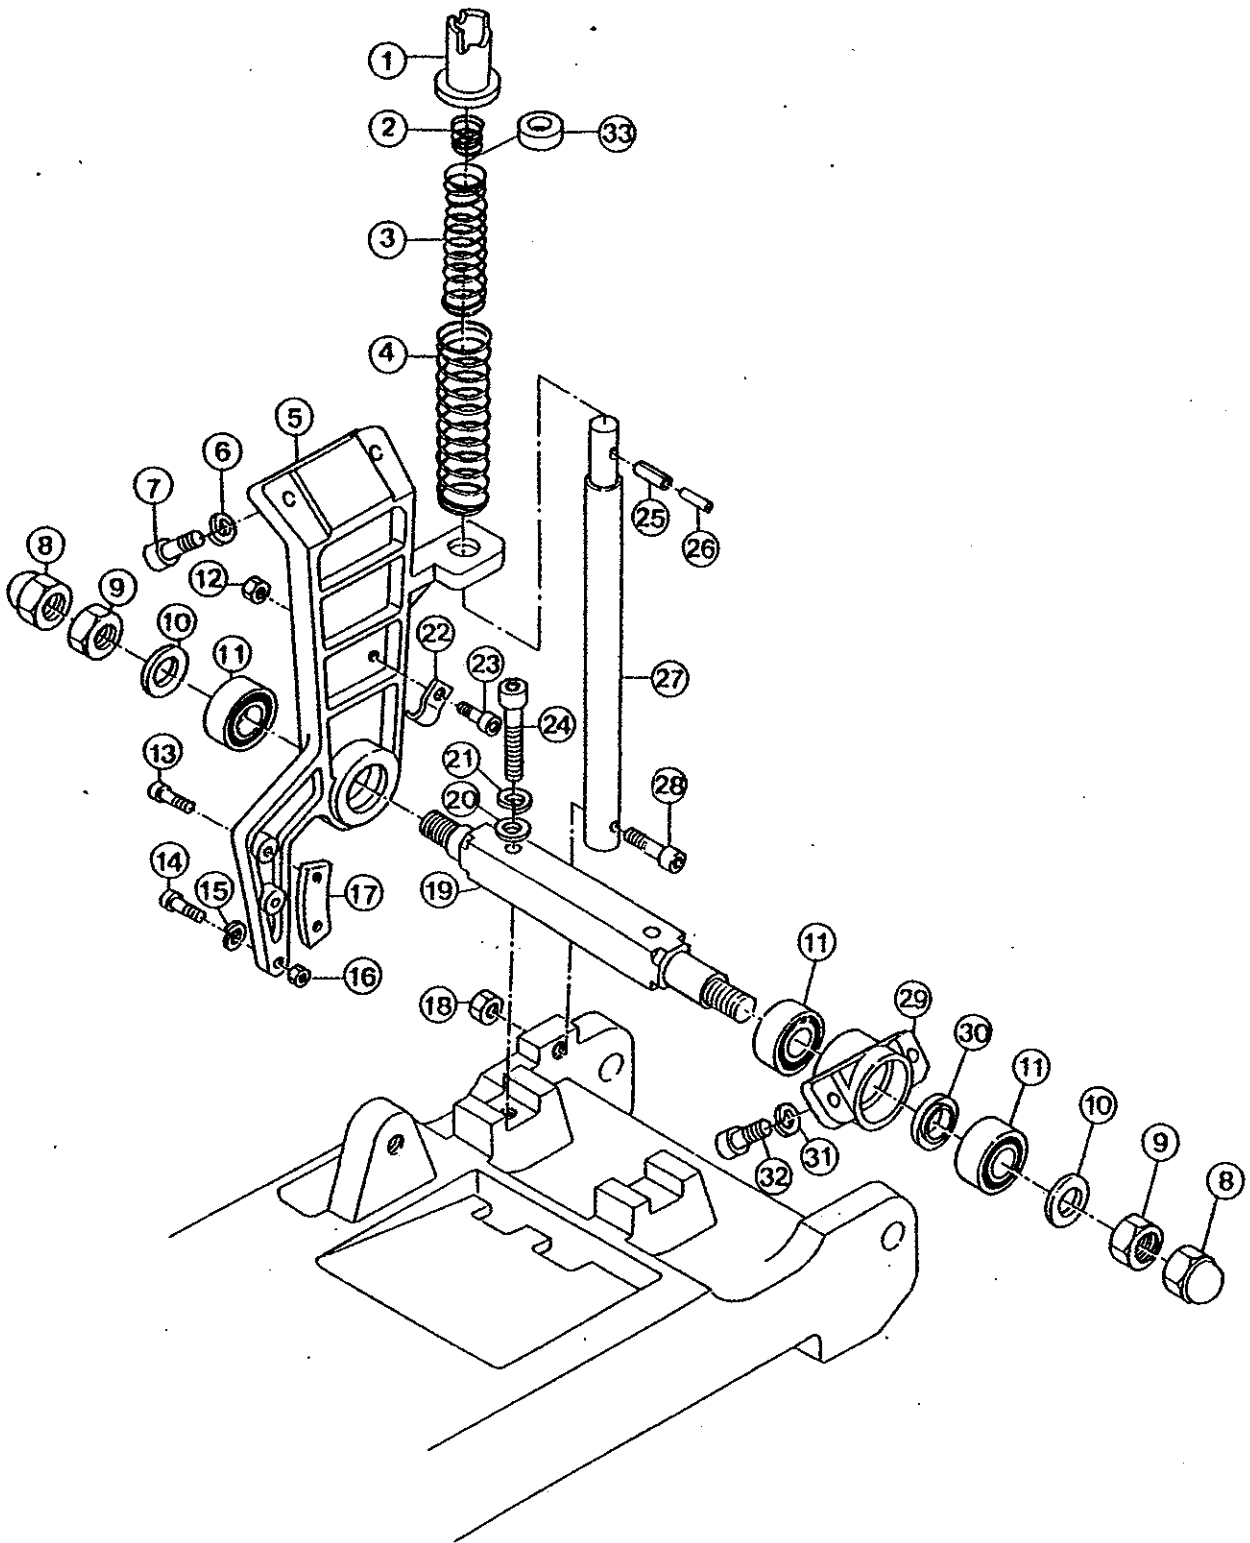

BAND SAW 2 2 2 - 2 2 F

FLAT VICE

