

## **RV Compressor Oil Change Procedure**

### **Removing Compressor Oil**

- 01) Locate the valve on the front of unit labeled Comp. Oil.
- 02) Attach one end of hose to fitting and other end to an empty container.
- 03) Hold compressor momentary switch down until suction gauge reads "0" with Recover/Pump Out switch in the Recover Position.
- 04) Put 3 psi (.2bar) on the suction gauge by flipping Recover/Pump Out switch to Pump Out. Do not exceed 3 psi (.2 bar). Open Comp. Oil valve on front panel and tilt unit slightly to front. When oil quits draining close Comp. Oil Valve.

### **Adding Compressor Oil**

- 01) After all oil is removed the compressor should be charged with 7 oz. (200cc) of Mobil Artic EAL 22 or 32 compressor oil.
- 02) Hold compressor momentary switch down until a small vacuum is indicated on suction gauge.
- 03) Attach one end of hose to Comp. Oil fitting and other end to oil supply.
- 04) By opening Comp. Oil valve, oil will be pulled into compressor. DO NOT OVERCHARGE.